


RL11095

ASSEMBLY & INSTALLATION GUIDE

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

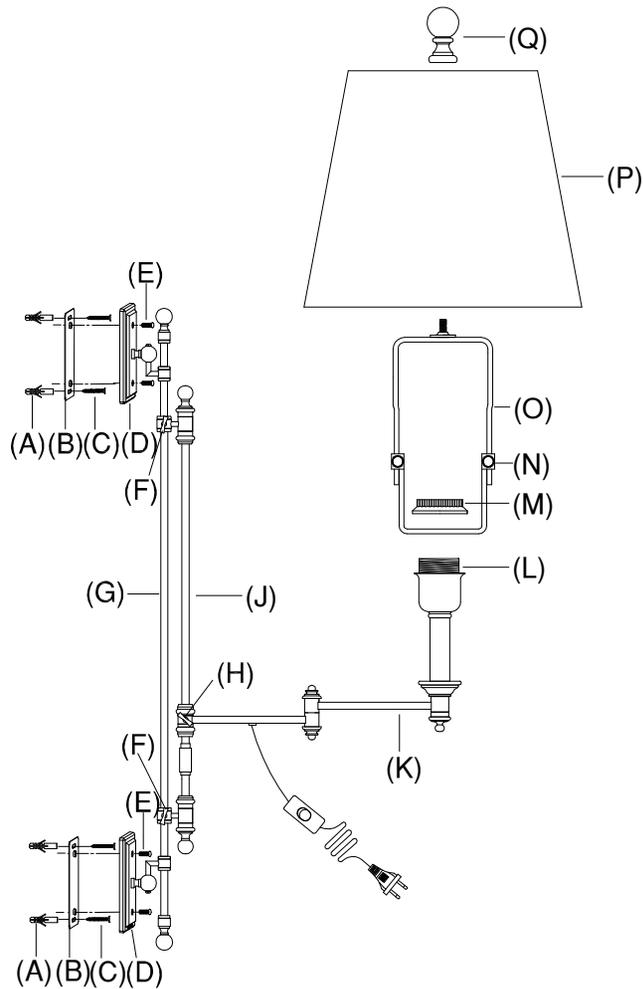

1. Position fixture bases (D) to the wall in desired orientation and use it as a template, mark outlet line for both fixture bases (D) on the wall. Remove the fixture base.
2. Remove mounting plates (B) from fixture bases (D) by removing base screws (E).
3. Place mounting plates (B) on the marked location, use it as a template, and mark points for four mounting holes of both mounting plates (B) on the wall. Remove the mounting plates (B).
4. Affix the mounting plates (B) to the wall by aligning the mounting holes with center holes of plastic anchors (A), inserting mounting screws (C) to secure mounting plates (B) to the wall.
5. Attach fixture bases (D) to affixed mounting plates (B) and secure with base screws (E).
6. Remove threaded ring (M) from threaded section of lamp holder (L).
7. Attach bottom ring of harp (O) over top threaded section of lamp holder (L) and secure with threaded ring (M).
8. Remove finial (Q) from harp (O). Place shade (P) over the bolt attached on the top of harp. Screw finial (Q) onto the bolt to secure shade to the harp.
9. Insert light bulb into socket.
10. Plug lamp into electrical outlet.
11. ADJUSTMENT INSTRUCTIONS:
 - 1- Loosen adjustment knobs (N) at both sides of harp (O).
 - 2- Adjust harp (O), up or down, to get desired height. The lamp holder (L) should not show under shade when the harp is adjusted correctly.
 - 3- Carefully tighten the adjustment knobs (N).
 - 4- Loosen the adjustment keys (F), (H), raise or lower arm (G) & (J) to desired height, tighten the adjustment keys (F) & (H).

R A L P H L A U R E N