


ASSEMBLY INSTRUCTIONS

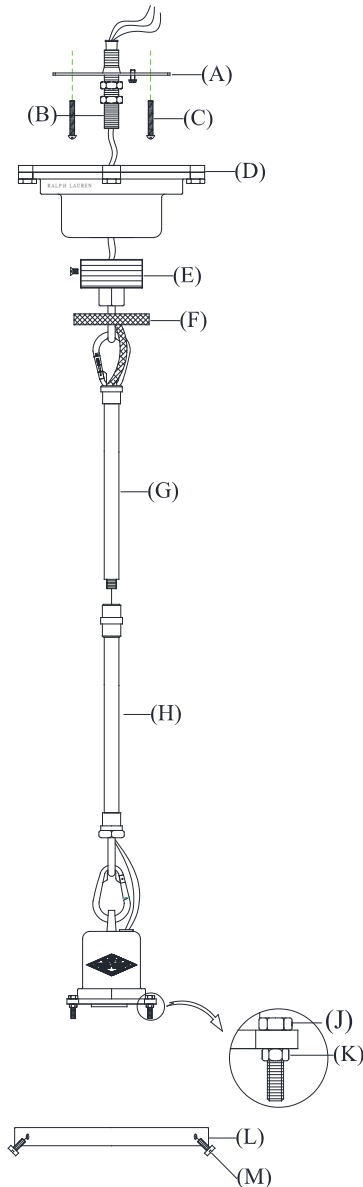

Fulton Mini Pendant

Item #RL 5119

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the carton.
2. Loosen hex nuts (K) from threaded rods (J), and attach lamp shade (not included) to threaded rods, letting threaded rods (J) pass through the holes of shade, and secure with hex nuts (K).
3. Remove set screws (M) from assembly part (L).
4. Insert light bulb into the socket.
5. Attach assembly part (L) to lamp shade (not included), and secure with set screws (M).
6. Attach upper pole (G) to lower pole (H) and tightening by turning pole (G) in clockwise direction.
7. Hook lamp pole (G) to mounting loop (E) and the ring of assembly part.
8. Unscrewing the canopy ring (F) from chain mounting loop (E) and slide canopy (D) and canopy ring (F) on pole.
9. Feed wire through pole (H) & (G), canopy ring (F), canopy (D) and mounting loop (E).
10. Attach mounting strap (A) to ceiling outlet box using mounting screws (C) provided.
11. Insert threaded nipple (B) in mounting strap (A). Using pliers, thread one of hex nut to nipple (B) to secure.
12. Attach chain mounting loop (E) to thread nipple using the ceiling loop screw.

RALPH LAUREN



ASSEMBLY INSTRUCTIONS

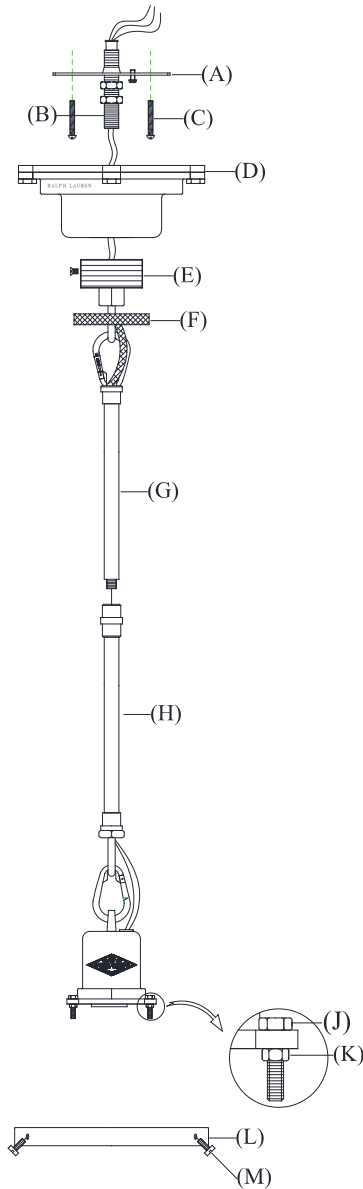

Fulton Mini Pendant

Item #RL 5119

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

13. Attach the bare copper ground from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
14. Connect neutral wire from fixture (ribbed molded wire) to the neutral wire from the junction box (usually white). Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed.
15. Tuck the wire connections neatly into the ceiling outlet box.
16. Slip canopy (D) to ceiling and secure with canopy ring (E).

are Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

